



Please add a new device



Home page appears.
Press the "ADD DEVICE" button
to add HT400.



GLife

Please choose a device



HT400



SELECT

Press the "SELECT" button for HT400.



GLife

Give the device a name

Continue

Give the device a name and press "Continue" button.



If you activate the Location Mode, your Smart Room Thermostat will automatically bring the ambient temperature to the value you have set when you approach or move away from the relevant location.

Location Access

GLife collects location data to automatically adjust the ambient temperature according to value you have set as you approach or move away from the relevant location where your Smart Room Thermostat is located even when the application is closed or not in use.

OK

Location Permission is Obtaining...

Allow location access to use "Location Mode" and see current weather condition.



Wait until purple light flashes after you plugged in the
HT400

Purple light is blinking

Plug in the device before
initiating the setup.
Wait until the LED on the device
blinks purple.

If the LED blinks purple, press
“Purple Light is blinking” button.



GLife

Connect to HT400_XXXX network with Wi-Fi and proceed to the next screen

Check the HT400 connection

Go to the Wi-Fi settings of your device and make sure you are connected to the HT400_XXXX network. Then, press the “Check the HT400 connection” button.



Enter the Wi-Fi network and password you use at
your home or office

ISIPARK

generallife

Connect to Wi-Fi

Enter the Wi-Fi Network name
and password which HT400 can
connect.

Press "Connect to Wi-Fi" button
once the correct information is
entered.



GLife

Wait for green light blinking on HT400. If the pink light comes on after a while and then purple light flashes, it means you entered incorrect Wi-Fi information.

Green light is blinking

If the LED on the HT400 blinks green, press “Green Light is blinking” button.

* If LED blinks purple, it means you have entered incorrect Wi-Fi information. Enter the correct information by returning back to the “Connect to Wi-Fi” step.



While pairing the device with the Receiver, press the pairing button on the Receiver. Waiting until to see green LED blinks of the receiver unit is necessary. Then, press the pairing button on the Room Thermostat for 2 seconds. Receiver will beep and LED will turn constant green.

Pairing completed

While pairing HT400, follow below steps respectively;

- Press the pairing button on the Receiver and wait until LED blinks green.
- Then, press the pairing button located under the HT400 for 2 seconds.
- LED on the Receiver will be steady.
- If you have completed the steps, press the “Pairing completed” button.



GLife

Go to Wi-Fi settings, leave the device's network and connect a network with internet connection

I reconnected to Wi-Fi Network

Connect to your home Wi-Fi Network by opening your phone's Wi-Fi settings and press the "I reconnected to Wi-Fi Network" button. You will be redirected to the home page.

GLife



HT400

ISIPARK




24.8



18.0°



 HELP

 ADD DEVICE

You can see your application membership information and log out of the application.



ACCOUNT INFORMATION

Contact Informations

ht400@generallife.com.tr

Log out

Build v1.0.9.0

If you would like to log out of the application, you may press the "Log Out" button.

GLife



HT400

ISIPARK



18.0°



Devices linked to your account shown here.

 Shuts down HT400 and heating unit.

 Button increases the set temperature value and the heating unit is controlled according to this value.


 Button reduces the set temperature value and the heating unit is controlled according to this value.

Select the device you wish to control.






Main menu of HT400 appears and device name shown here.

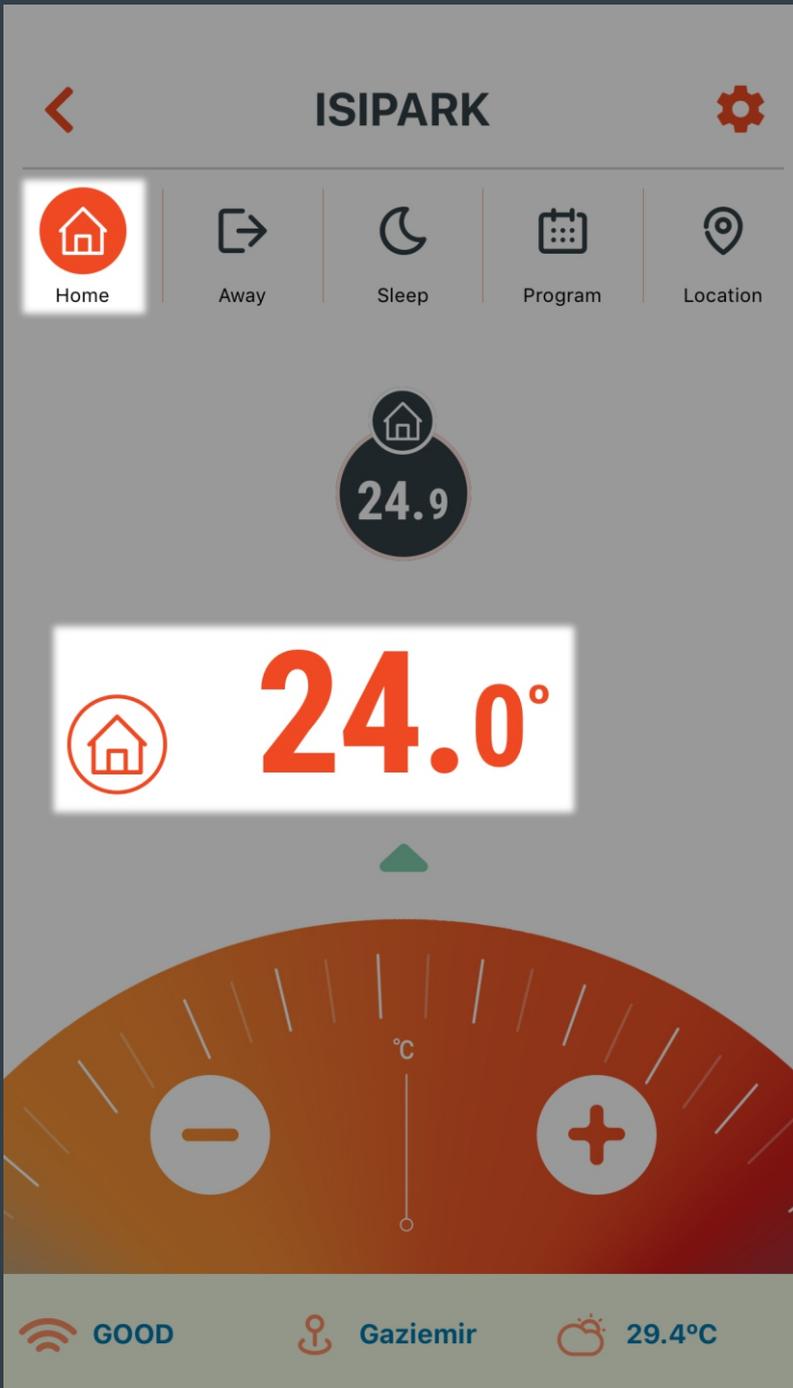


The heating unit is managed according to the temperature set for home mode.




The heating unit is managed according to the temperature set for away mode.

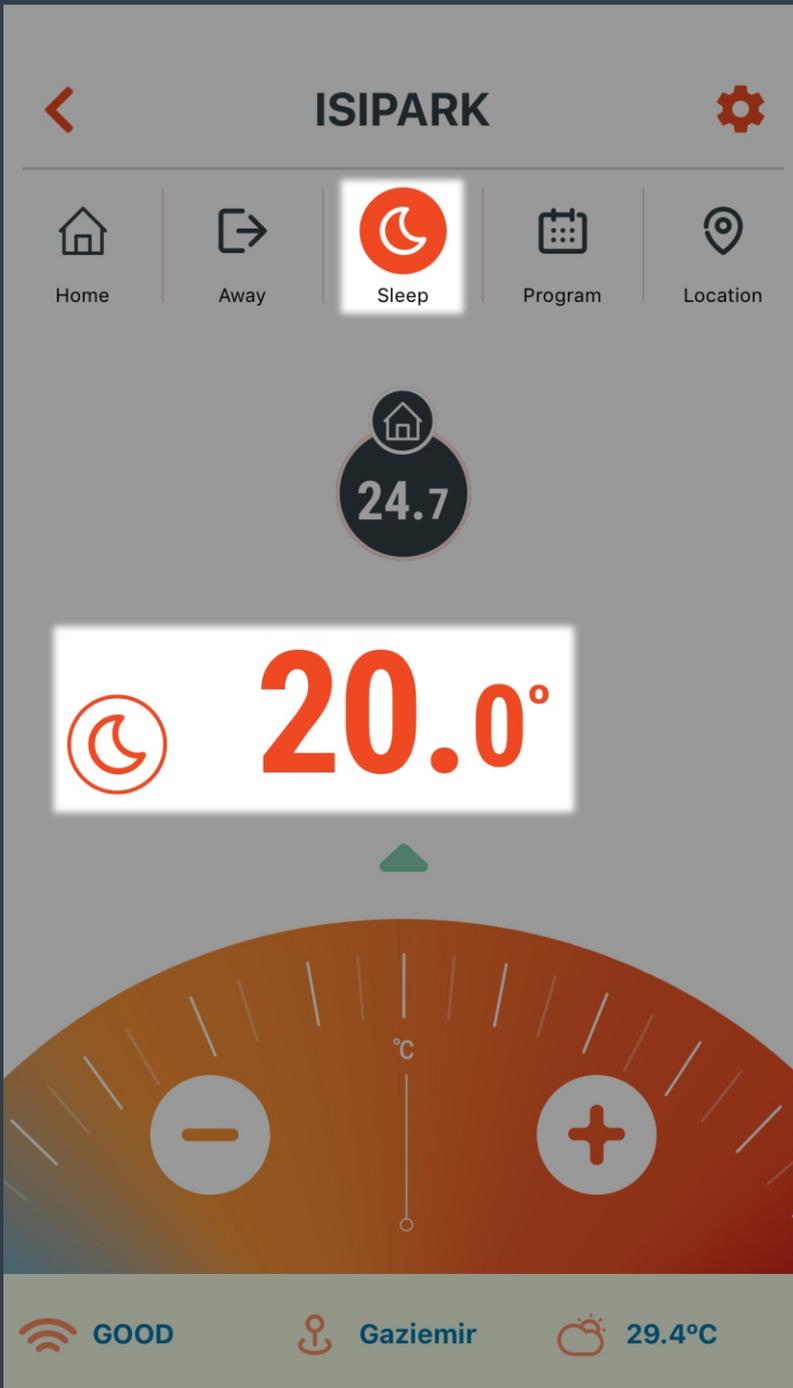

The heating unit is managed according to the temperature set for sleep mode.

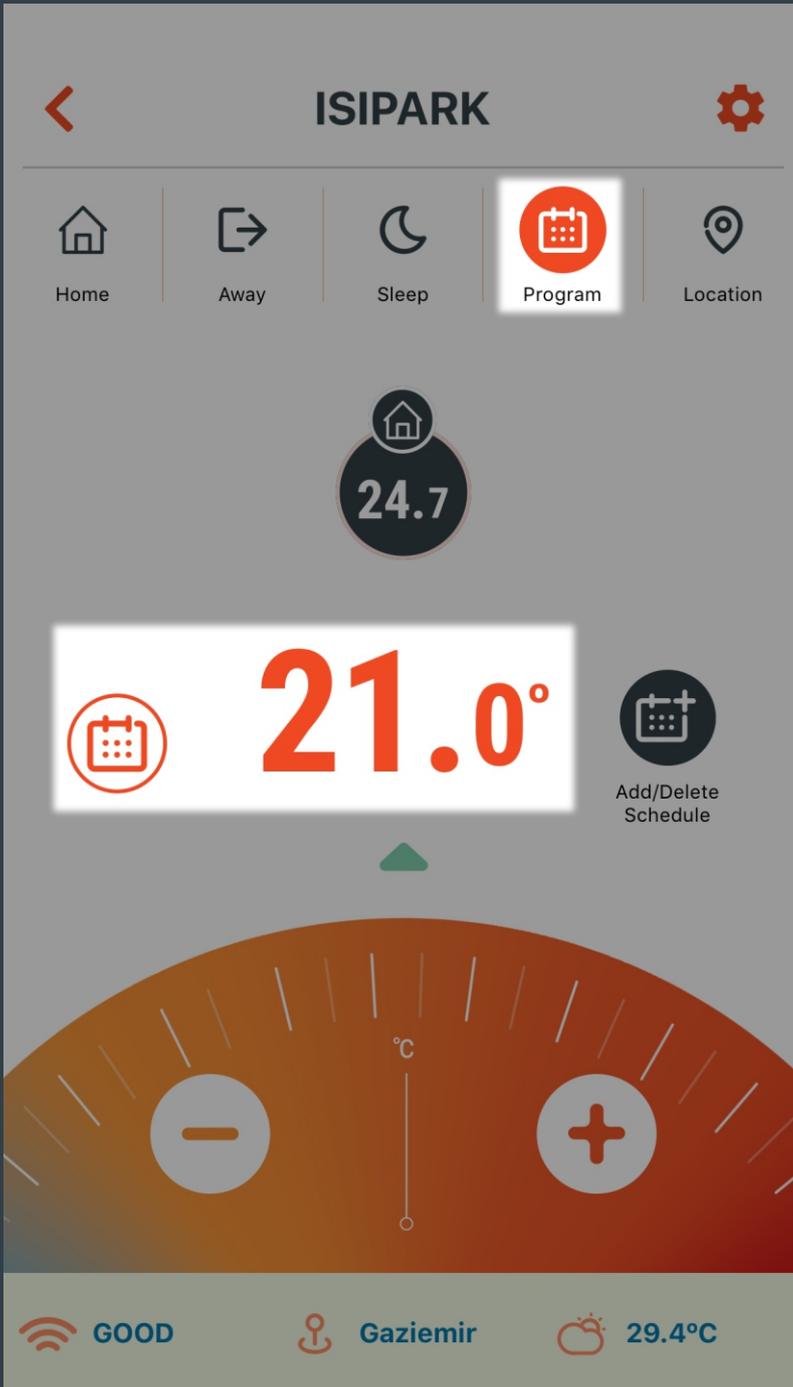

The heating unit is managed according to the temperature in the schedule added on a day and 30 minute basis in the Program Mode.

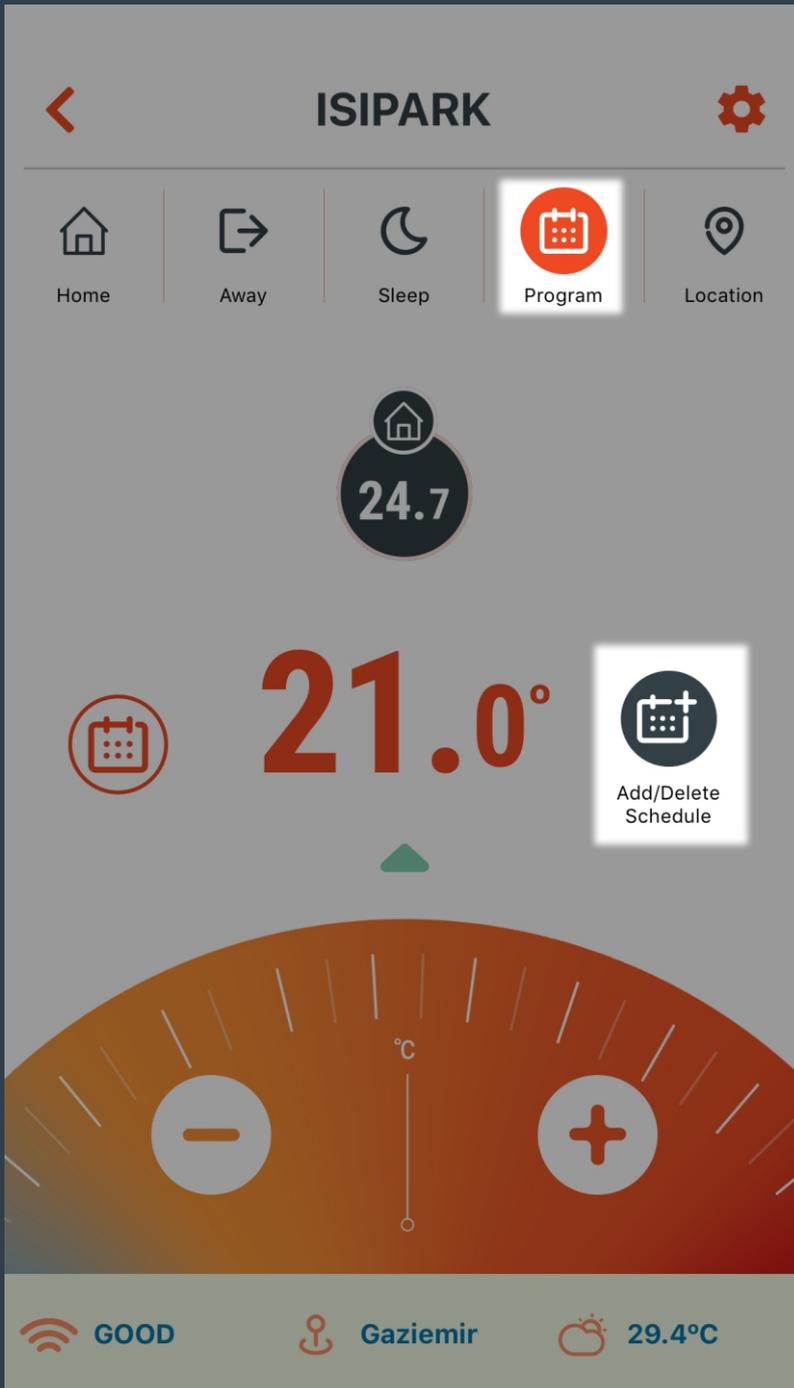

The screen where you can set the daily or weekly schedule settings appears when you press on the “Add/Delete Schedule” button.

You can access the same menu by pressing the Program Mode button for 3 seconds.



ISIPARK

PROGRAMMING MODE

Monday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Tuesday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Wednesday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Thursday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

 + ADD SCHEDULE

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

A daily or weekly schedule is added by pressing the “ADD SCHEDULE” button.

 **ISIPARK**

Please choose the day

Monday	Tuesday	Wednesday
Thursday	Friday	Saturday
Sunday		

Please choose an hour

  **07** **30**  

Choose a set temperature

22.8°

SAVE THE SCHEDULE 

Select the day or days you wish to program.

Program yapmak istenilen saat seçilir.

 /  button sets the desired temperature to program.

The changed settings are saved by pressing "SAVE THE SCHEDULE" button.



ISIPARK

PROGRAMMING MODE

Monday

Edit Delete

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Tuesday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Wednesday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Thursday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

ADD SCHEDULE

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

If you wish to change or delete the setting made;
Press on the time you wish to change or delete.
“Edit” or “Delete” buttons located in the upper right corner can be used to make changes.



ISIPARK

PROGRAMMING MODE

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Saturday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Sunday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Remove all schedules



ADD SCHEDULE

Pressing "Remove all schedules" button opens the page to remove all schedules added.



ISIPARK

PROGRAMMING MODE

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Saturday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Sunday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Remove all schedules



ADD SCHEDULE

All schedules are removed when pressed "Yes" button.



ISIPARK

PROGRAMMING MODE

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Saturday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23


Sunday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23


Remove all schedules

All schedules have been removed

You can return to the previous menu by pressing the "Back" button.

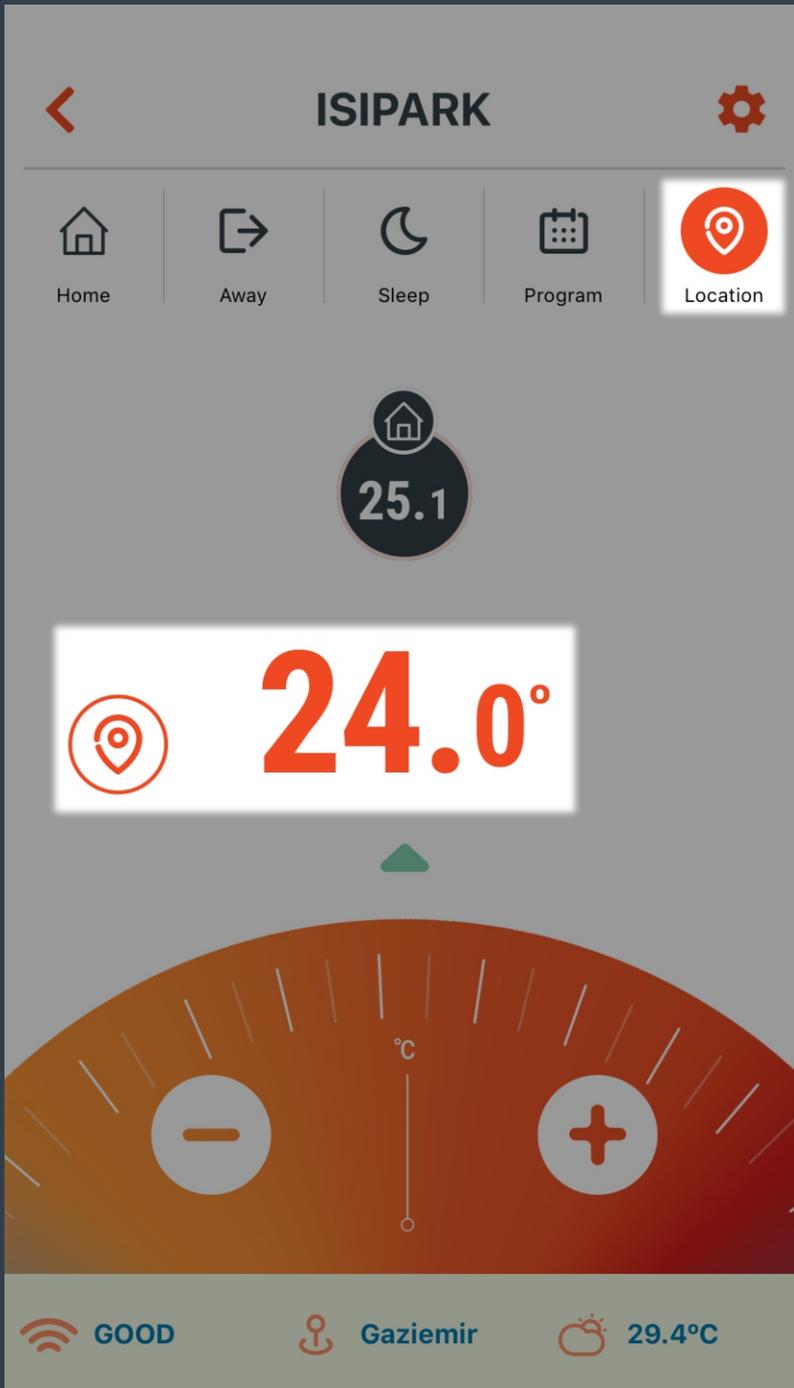

The heating unit is managed according to the range and temperature set for home mode.

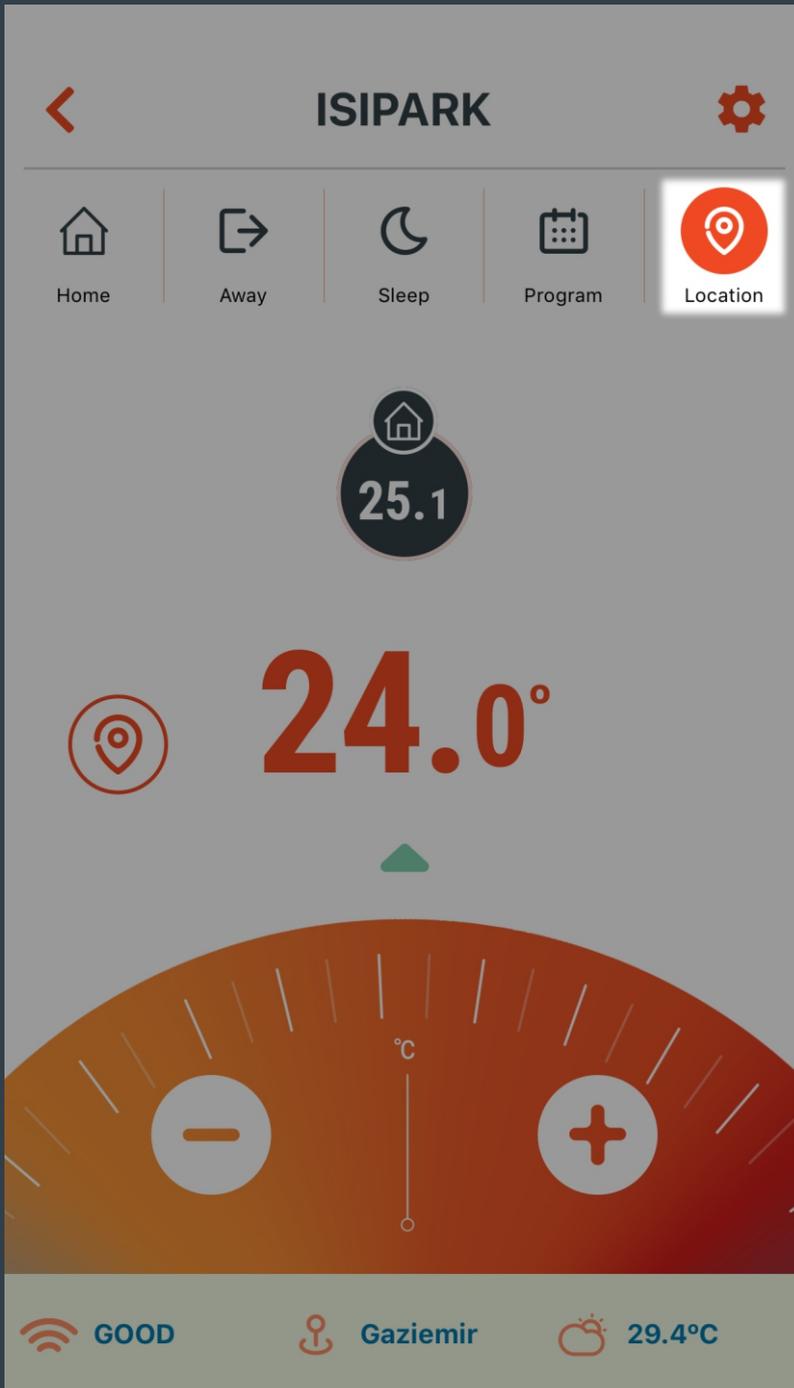


Press the “Location Mode” button for 3 seconds to quickly switch to the “Location Mode” settings. The screen where you can set the location mode settings will appear.



ISIPARK

LOCATION MODE SETTINGS

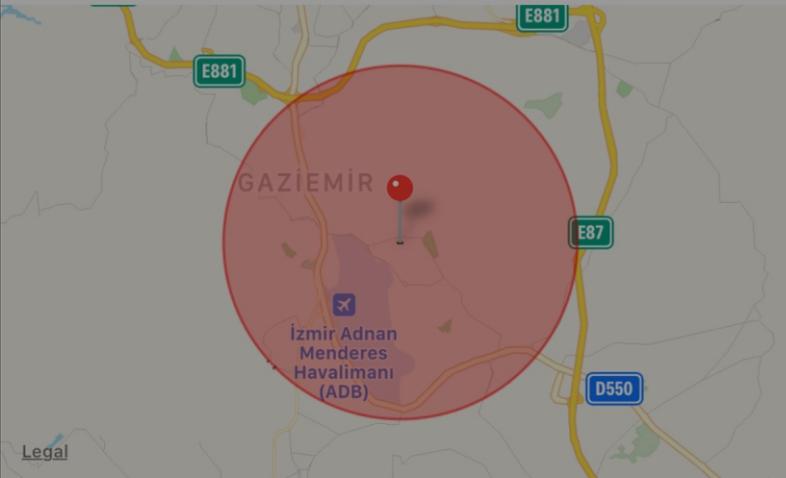

Location Range



5.0km



Set temperature within the Zone



24.0°



Set temperature outside of the Zone



ISIPARK



Location Range



5.0km



Set temperature within the Zone



24.0°



Set temperature outside of the Zone



18.0°



Save the changes ✓

Desired range and temperature value for the "Location Mode" can be set here.



ISIPARK



Location Range



5.0km



Set temperature within the Zone



24.0°



Set temperature outside of the Zone




18.0°




Save the changes ✓

Press the “Save the Changes” button to save the changes have been made.

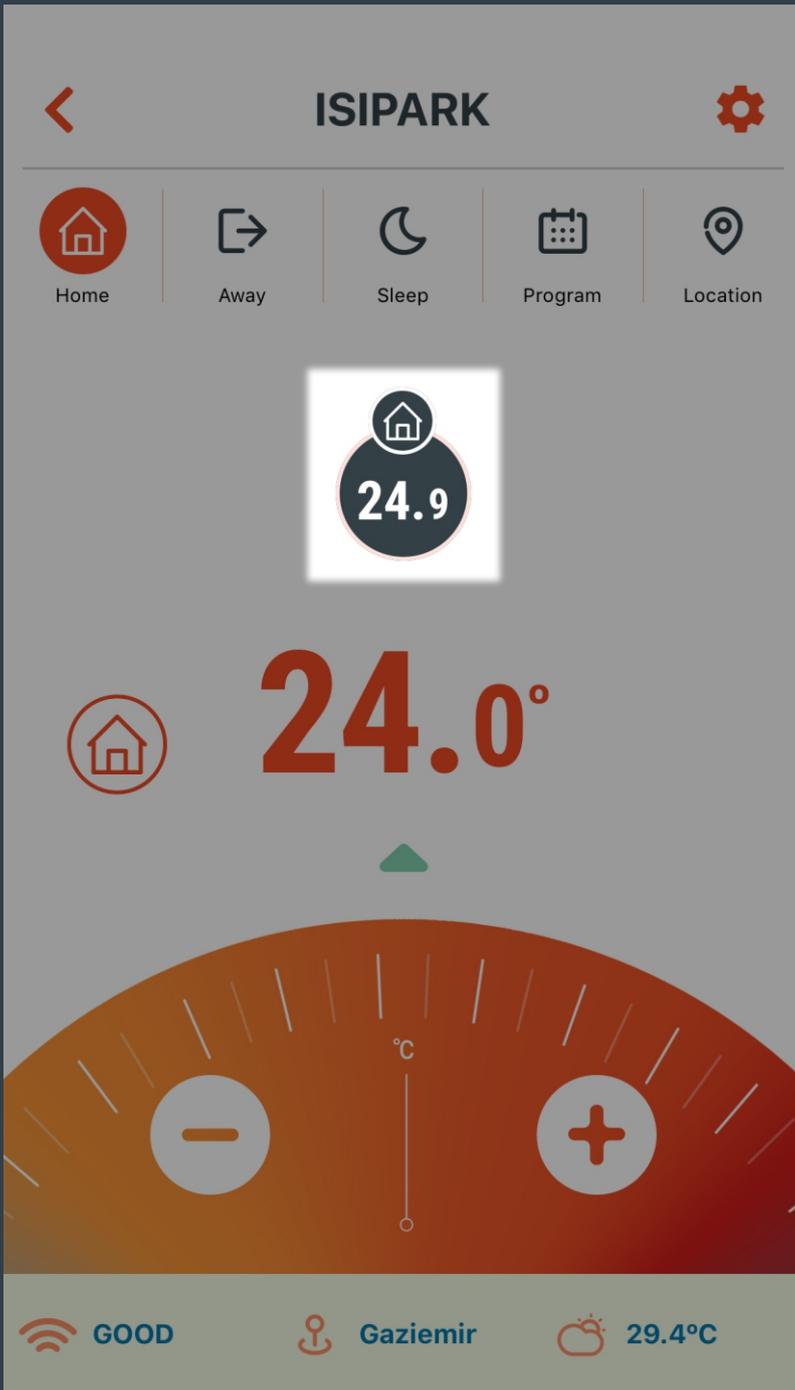

Temperature value measured by HT400 is shown here.

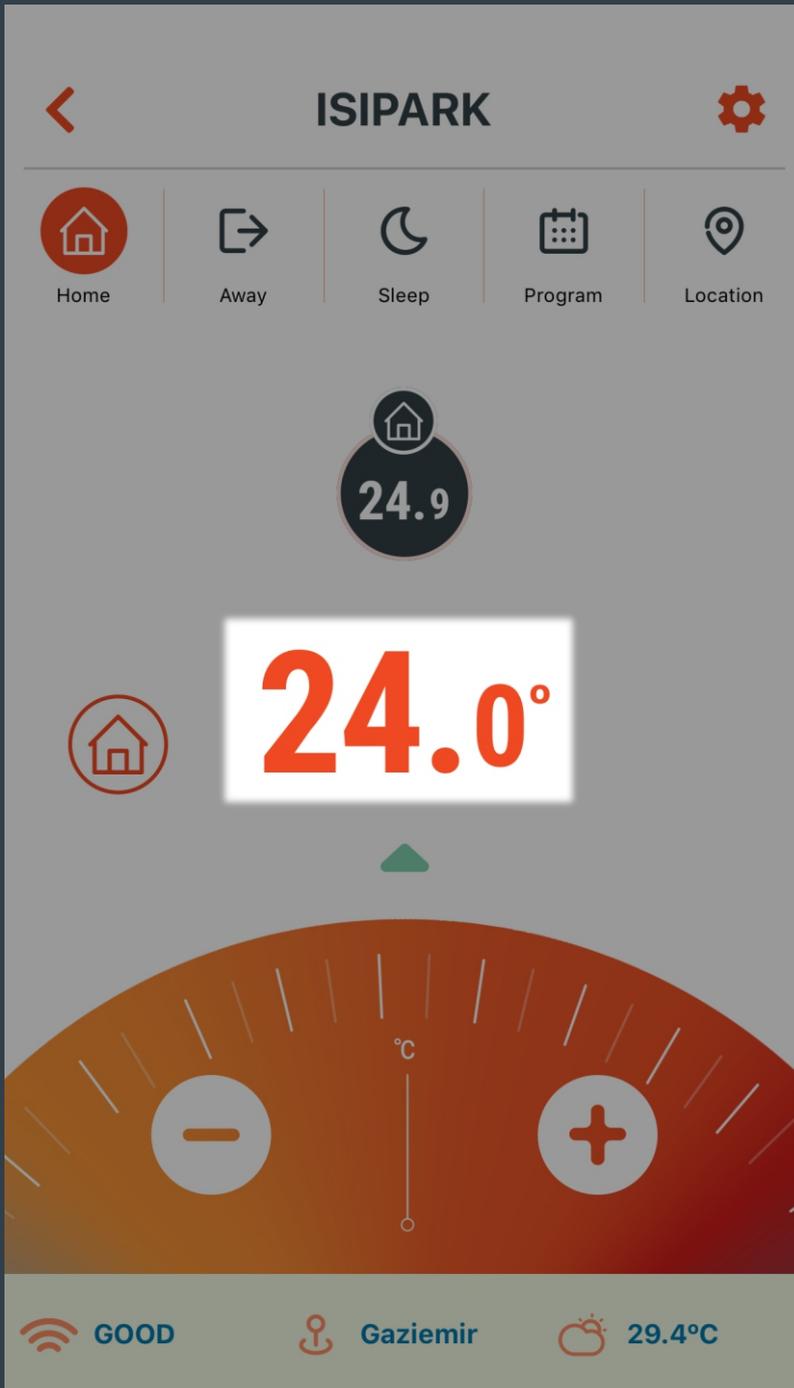


Set temperature value for the selected mode is shown here.



⊖ button reduces the set temperature value and the heating unit is managed according to this value.

⊕ button increases the set temperature value and the heating unit is managed according to this value.

Manual Mode becomes active.

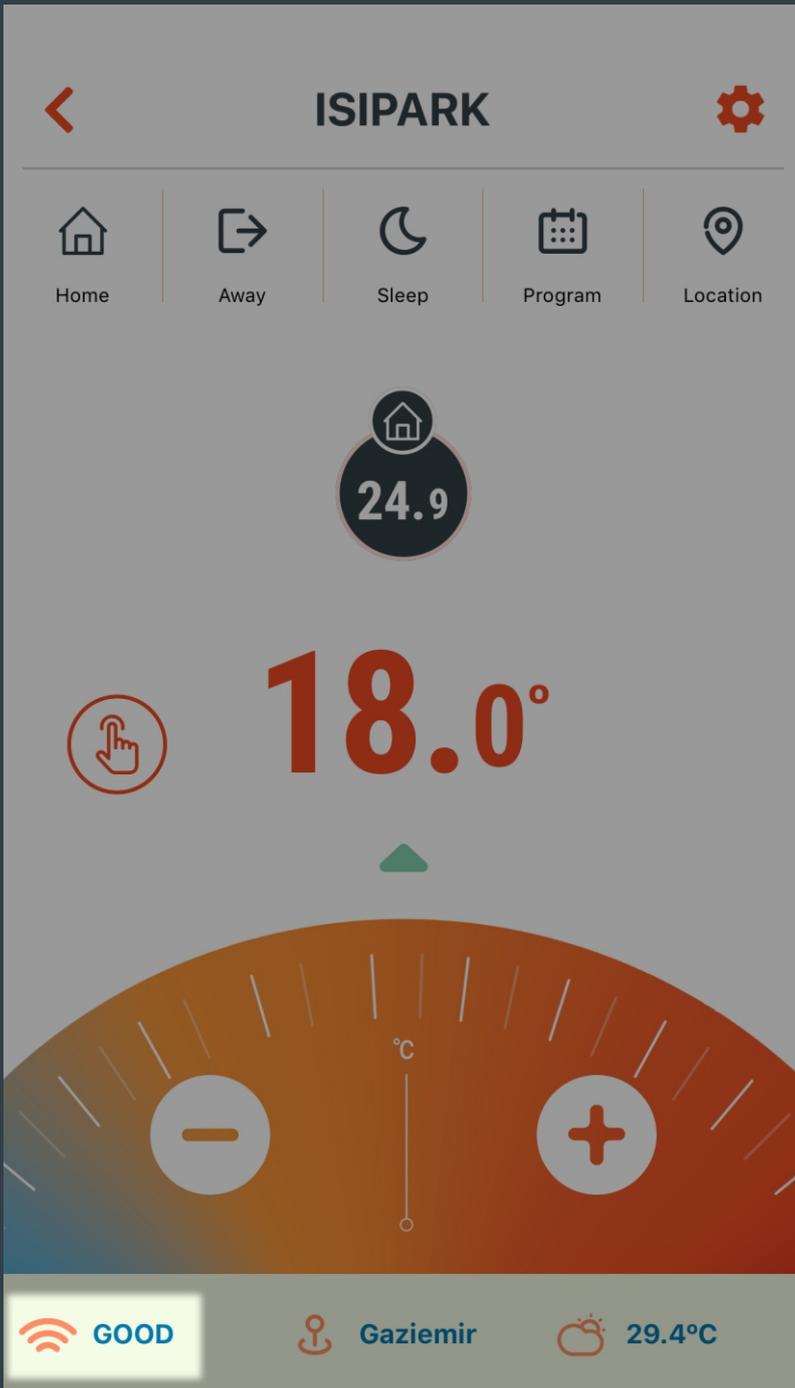

Shows the internet connection status of HT400.



Shows the location of HT400.



Estimated outside temperature taken from the meteorological data station according to the position of the HT400 is shown here.



Settings menu can be opened by pressing here.



ISIPARK

DEVICE SETTINGS



Calibration Settings

1.0°



Turn off the Device



Device Informations



Modes



Device Users



Resync the Device



Device calibration setting can be done here.



ISIPARK

DEVICE SETTINGS



Calibration Settings

0.0°



Turn on the Device



Device Informations



Modes



Device Users



Resync the Device



Shuts down HT400 and heating unit.



ISIPARK

DEVICE SETTINGS



Calibration Settings

0.0°



Turn off the Device



Device Informations



Modes



Device Users



Resync the Device



Device name can be changed here.



ISIPARK

Change the Device Name

ISIPARK-2



Save the Device Name ✓

Changed device name can be saved by pressing "Save the Device Name" button.



ISIPARK

Change the Device Name

ISIPARK



Save the Device Name ✓

You can return to the previous menu by pressing the “Back” button.



ISIPARK

DEVICE SETTINGS



Calibration Settings

0.0°



Turn off the Device



Device Informations



Modes



Device Users



Resync the Device



The screen which temperature values of the modes can be set appears.



ISIPARK

MODES

Home Mode



24.0°



Away Mode



18.0°



Sleep Mode



20.0°



Programming Mode



Location Mode



RESET THE MODES

Temperature values of the Home, Away and Sleep Modes can be set.



ISIPARK

MODES

Home Mode



24.0°



Away Mode



18.0°



Sleep Mode



20.0°



Programming Mode



Location Mode



RESET THE MODES

Program Mode appears to add/delete daily or weekly schedule.



ISIPARK

PROGRAMMING MODE

Monday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Tuesday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Wednesday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Thursday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

 + ADD SCHEDULE

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

A daily or weekly schedule is added by pressing the “ADD SCHEDULE” button.

 **ISIPARK**

Please choose the day

Monday	Tuesday	Wednesday
Thursday	Friday	Saturday
Sunday		

Please choose an hour

  **07** **30**  

Choose a set temperature

22.8°

SAVE THE SCHEDULE 

Select the day or days you wish to program.

Program yapmak istenilen saat seçilir.

 /  button sets the desired temperature to program.

The changed settings are saved by pressing "SAVE THE SCHEDULE" button.



ISIPARK

PROGRAMMING MODE

Monday

 Edit  Delete

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Tuesday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Wednesday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Thursday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

 ADD SCHEDULE

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

If you wish to change or delete the setting made; Press on the time you wish to change or delete. "Edit" or "Delete" buttons located in the upper right corner can be used to make changes.



ISIPARK

PROGRAMMING MODE

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Saturday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Sunday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Remove all schedules



ADD SCHEDULE

Pressing "Remove all schedules" button opens the page to remove all schedules added.



ISIPARK

PROGRAMMING MODE

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

22

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Saturday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Sunday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Remove all schedules



ADD SCHEDULE

All schedules are removed when pressed "Yes" button.



ISIPARK

PROGRAMMING MODE

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Friday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Saturday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23


Sunday

00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Remove all schedules

All schedules have been removed

You can return to the previous menu by pressing the "Back" button.

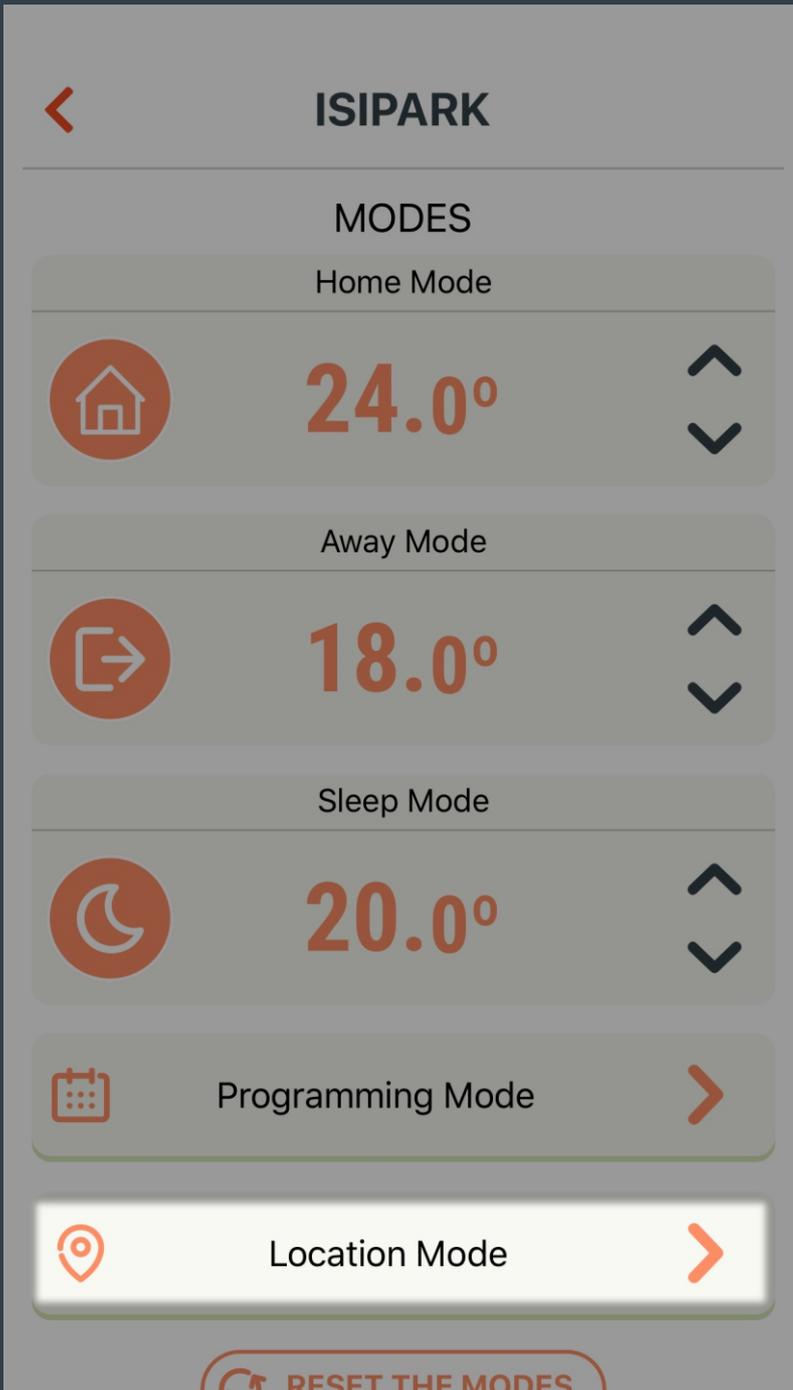


The screen appears where you can set the location mode settings.



ISIPARK

LOCATION MODE SETTINGS

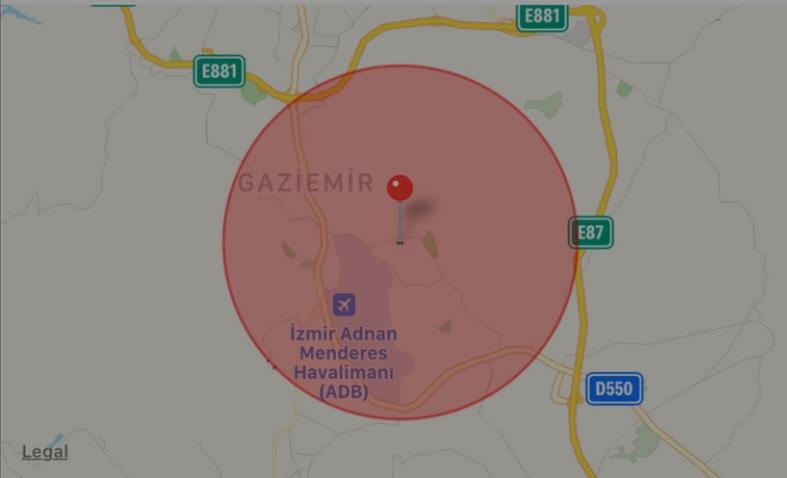

Location Range



5.0km



Set temperature within the Zone



24.0°



Set temperature outside of the Zone

Desired range and temperature value for the Location Mode can be set here.



ISIPARK



Location Range



5.0km



Set temperature within the Zone



24.0°



Set temperature outside of the Zone



18.0°



Save the changes ✓

Desired range and temperature value for the Location Mode can be set here.



ISIPARK



Location Range



5.0km



Set temperature within the Zone



24.0°



Set temperature outside of the Zone



18.0°



Save the changes ✓

Press the “Save the Changes” button to save the changes have been made.



ISIPARK

Home Mode



24.0°



Away Mode



18.0°



Sleep Mode



20.0°



Programming Mode



Location Mode



RESET THE MODES

Restores set values for all modes to factory settings.



ISIPARK

DEVICE SETTINGS



Calibration Settings

0.0°



Turn off the Device



Device Informations



Modes



Device Users



Resync the Device



The list of current users is shown here. User can be added or removed in this page.



ISIPARK

DEVICE USERS



ht400@generallife.com.tr



ADD USER

Adds invited user to manage HT400.



ISIPARK

DEVICE USERS



ht400@generallife.com.tr

Add User

Enter the e-mail address of the User
you would like to add

Cancel

Invite

"tr"

q w e r t y u i o p

a s d f g h j k l

↑ z x c v b n m ↵

123



space

return

The e-mail address of the invited user must to be entered.



ISIPARK

DEVICE USERS



guest@generallife.com.tr



ht400@generallife.com.tr



ADD USER

The invited user is deleted.



ISIPARK

DEVICE SETTINGS



Calibration Settings

0.0°



Turn off the Device



Device Informations



Modes



Device Users



Resync the Device



Resets HT400.



If you activate the Location Mode, your Smart Room Thermostat will automatically bring the ambient temperature to the value you have set when you approach or move away from the relevant location.

Location Access

GLife collects location data to automatically adjust the ambient temperature according to value you have set as you approach or move away from the relevant location where your Smart Room Thermostat is located even when the application is closed or not in use.

OK

Location Permission is Obtaining...

Allow location access to use "Location Mode" and see current weather condition.



Wait until purple light flashes after you plugged in the
HT400

Purple light is blinking

Plug in the device before
initiating the setup.
Wait until the LED on the device
blinks purple.

If the LED blinks purple, press
“Purple Light is blinking” button.



GLife

Connect to HT400_XXXX network with Wi-Fi and proceed to the next screen

Check the HT400 connection

Go to the Wi-Fi settings of your device and make sure you are connected to the HT400_XXXX network. Then, press the “Check the HT400 connection” button.



Enter the Wi-Fi network and password you use at
your home or office

ISIPARK

generallife

Connect to Wi-Fi

Enter the Wi-Fi Network name
and password which HT400 can
connect.

Press "Connect to Wi-Fi" button
once the correct information is
entered.



GLife

Wait for green light blinking on HT400. If the pink light comes on after a while and then purple light flashes, it means you entered incorrect Wi-Fi information.

Green light is blinking

If the LED on the HT400 blinks green, press “Green Light is blinking” button.

* If LED blinks purple, it means you have entered incorrect Wi-Fi information. Enter the correct information by returning back to the “Connect to Wi-Fi” step.



While pairing the device with the Receiver, press the pairing button on the Receiver. Waiting until to see green LED blinks of the receiver unit is necessary. Then, press the pairing button on the Room Thermostat for 2 seconds. Receiver will beep and LED will turn constant green.

Pairing completed

While pairing HT400, follow below steps respectively;

- Press the pairing button on the Receiver and wait until LED blinks green.
- Then, press the pairing button located under the HT400 for 2 seconds.
- LED on the Receiver will be steady.
- If you have completed the steps, press the “Pairing completed” button.



GLife



Go to Wi-Fi settings, leave the device's network and connect a network with internet connection

I reconnected to Wi-Fi Network

Connect to your home Wi-Fi Network by opening your phone's Wi-Fi settings and press the "I reconnected to Wi-Fi Network" button. You will be redirected to the home page.



Step Into the World of GENERAL Life

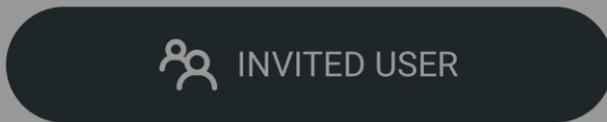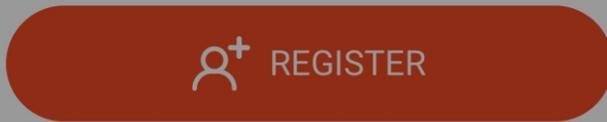

Build v1.0.9.0

In case you forget your password, press the "LOGIN" button on the initial screen.



LOGIN

E-Mail Address

Password



[Forgot password](#)

LOGIN

[Terms of Use](#)

Press the “Forgot Password”
button in the LOGIN screen.



LOGIN

E-Mail Address

Password



Forgot password

Please enter your e-mail address

Cancel

Send

[Terms of Use](#)

Enter the e-mail address linked to your account and press "Send" button.



Change Password

Please enter all password renewal codes sent to your e-mail.

Continue

- On the page that appears, 2 codes need to be entered.
- Codes can be found in the e-mails under the HT500 SET and HT400 subjects sent to your e-mail address which you entered for the password reset request.
- Enter the codes to the “ Code1 “ and “ Code2 “ sections in the application regardless their order.



Change Password

Please enter your new password



Update

Enter your new password to the "Password" and "Re-enter Password" sections in the page appears after you entered to codes and press "Update" button.



Step Into the World of GENERAL Life

 LOGIN

 REGISTER

 INVITED USER

Password successfully changed. Please login with your new password

Build v1.0.9.0

Once you see the “Password successfully changed.” notification, you can use your new password.